

**NAME**

devlink-lc – devlink line card configuration

**SYNOPSIS**

**devlink** [ *OPTIONS* ] **lc** { *COMMAND* | **help** }

*OPTIONS* := { -**V**[*ersion*] }

**devlink lc set** *DEV* **lc** *LC\_INDEX* [ **type** { *LC\_TYPE* | **notype** } ]

**devlink lc show** [ *DEV* [ **lc** *LC\_INDEX* ] ]

**devlink lc help**

**DESCRIPTION****devlink lc set - change line card attributes**

*DEV* Specifies the devlink device to operate on.

Format is:

BUS\_NAME/BUS\_ADDRESS

**lc** *LC\_INDEX*

Specifies index of a line card slot to set.

**type** { *LC\_TYPE* | **notype** } Type of line card to provision. Each driver provides a list of supported line card types which is shown in the output of **devlink lc show** command.

**devlink lc show - display line card attributes**

*DEV* Specifies the devlink device to operate on. If this and **lc** arguments are omitted all line cards of all devices are listed.

**lc** *LC\_INDEX*

Specifies index of a line card slot to show.

**EXAMPLES**

devlink lc show

Shows the state of all line cards on the system.

devlink lc show pci/0000:01:00.0 lc 1

Shows the state of line card with index 1.

devlink lc set pci/0000:01:00.0 lc 1 type 16x100G

Sets type of specified line card to type *16x100G*.

devlink lc set pci/0000:01:00.0 lc 1 notype

Clears provisioning on a line card.

**SEE ALSO**

**devlink(8)**, **devlink-dev(8)**, **devlink-port(8)**, **devlink-monitor(8)**,

**AUTHOR**

Jiri Pirko <jiri@nvidia.com>